

MODULE LIST - ALL-100 Family

[Download](#)

PACKAGE	MODULE	Function	EXE.
BGA	M1-UN-BG68A	Need option TOP(28F128K3-BG64A/28F128P3-BG64A/ 28F256K3-BG64A/36VF160-BG48A/49B1614A-BG48A/ ATMEGA324-ML44A/AVR-ML28A/AVR-ML32A/AVR-ML44A/ M28W320-BG48A/MX29LV320-BG48A/S29PL064J-BG48A/ S29GLXXN-BG64B/S29GLXXR-BG64).Supports pin to pin.	ALL100.EXE
BGA	M4-36VF160-BG48A	Gang MODULE. Need option TOP(TOP-36VF160-BG48A). M4-36VF160-BG48A + option TOP(4 pcs). Supports SST SST39VF6401-B1K,SST39VF6401B-B1K, SST39VF6401B-B1KE.(TFBGA-48)	GMEMW48. EXE
BGA	M4-FLASH-BG48B	Gang MODULE. Need option TOP(TOP-49B1614A-BG48A / TOP-MX29LV320-BG48A / TOP-S29GL064A-BG48A / TOP-S29PL064J-BG48A). M4-FLASH-BG48B+option TOP(4 pcs). Supports FLASH MEMORY 48-pin IC.(BGA-48)	GMEM32.EXE GMEMW48. EXE

BGA	M4-RC28FXXX-BG64B	<p>Gang MODULE.</p> <p>Need option TOP(TOP-28F128K3-BG64A / TOP-28F128P3-BG64A).</p> <p>M4-RC28FXXX-BG64B + option TOP(4 pcs).</p> <p>Supports INTEL,NUMONYX BGA package lcs.(BGA-64)</p>	<p>GMEMW56.</p> <p>EXE</p>
BGA	M4-S29GLXXX-BG64A	<p>Gang MODULE.</p> <p>Need option TOP(TOP-28F128K3-BG64A / TOP-S29GLXXN-BG64B / TOP-S29GLXXR-BG64).</p> <p>M4-S29GLXXX-BG64A+option TOP(4 pcs).</p> <p>Supports NUMONYX,SPANSION BGA package lcs.(BGA-64)</p>	<p>GMEMW56.</p> <p>EXE</p>
DIP	M1-D8749-DP40	<p>48-pin DIP socket.</p> <p>Supports INTEL 8748,8749.(DIP-40)</p>	XAMPU3.EXE
DIP	M1-UN-DP48	<p>48-pin DIP socket.</p> <p>Supports pin to pin.(DIP-8 ~ DIP-48)</p>	ALL100.EXE
DIP	M4-AVR-DP28	<p>4 gang sockets.</p> <p>32-pin DIP socket.</p> <p>Supports ATMEL ATMEGA48V.(DIP-28)</p>	GAVR.EXE
DIP	M4-MPU51-DP40	<p>4 gang sockets.</p> <p>40-pin DIP socket.</p> <p>Supports MPU 8751/89C51 series.(DIP-40)</p>	GPGM51.EXE

DIP	M4-PICP-DP28	4 gang sockets.	GPIC1.EXE
		32-pin DIP socket.	GPIC18.EXE
		Supports MICROCHIP PIC PARALLEL DEVICE.(DIP-18/28)	GPIC2.EXE
DIP	M4-PICS-DP20	4 gang sockets.	GPIC1.EXE
		32-pin DIP socket.	GPIC18.EXE
		Supports MICROCHIP PIC series.(DIP-8/14/18/20)	GPIC2.EXE
DIP	M4-PICS-DP40	4 gang sockets.	GPIC1.EXE
		40-pin DIP socket.	GPIC18.EXE
		Supports MICROCHIP PIC series.(DIP-28/40)	GPIC2.EXE
DIP	M4-SEEP-DP8		GAVR2.EXE
		4 gang sockets.	GEPCS.EXE
		32-pin DIP socket.	GPIC1.EXE
		Supports SERIAL EEPROM.(DIP-8)	GPIC2.EXE
			GSEEP.EXE
DIP	M4-SPMC65P-DP32	4 gang sockets.	
		32-pin DIP socket.	GAMPU2.EXE
		Supports SUNPLUS SPMC65P series.(DIP-16/18/20/28/32)	

DIP	M4-ST62XX-DP28	4 gang sockets. 32-pin DIP socket. Supports STM ST62 series.(DIP-16/20/28)	GST62.EXE
DIP	M4-Z8F042A-DP8	4 gang sockets. 32-pin DIP socket. Supports ZILOG Z8F042APB.(DIP-8)	GPGMZ8.EXE
DIP	M6-FLASH-DP32	6 gang sockets. 32-pin DIP socket. Supports E(E)PROM/FLASH/LPC/FWH DIP28/32 package IC. (DIP-28/32)	GMEM32.EXE
NONE	M1-JTAG-CN10	Supports JTAG ISP (In System Programming).(2x5-pin)	XA56FXX.EXE XAEPM7.EXE XEPC.EXE
NONE	M1-SPI-CN10	Supports SST SST25VF020 ISP (In System Programming).(2x5-pin)	XSPROM.EXE
PLCC	AM8-FLASH-PL32	AT3 only. 8 gang sockets. 32-pin PLCC socket. Supports E(E)PROM/FLASH/LPC/FWH PLCC32 package IC.(PLCC-32)	GMEM32.EXE
PLCC	M1-UN-PL44	44-pin PLCC socket. Supports pin to pin.(PLCC-44)	ALL100.EXE

PLCC	M4-89C51CC01-PL44	4 gang sockets. 44-pin PLCC socket. Supports ATMEL AT89C51CC01,AT89C51CC03,AT89C51AC2, AT89C51AC3,T89C51AC2,T89C51CC01.(PLCC-44)	GC8051.EXE
PLCC	M4-89V52X2-PL44	4 gang sockets. 44-pin PLCC socket. Supports NXP 89V52X2.(PLCC-44)	GPGM51.EXE
PLCC	M4-AT17XX-PL20	4 gang sockets. 20-pin PLCC socket. Supports ATMEL AT17XX series; XILINX XC17XX series.(PLCC-20)	GSEEP.EXE
PLCC	M4-EP16M-PL44	4 gang sockets. 44-pin PLCC socket. Supports word wide EPROM from 4M to 16M.(PLCC-44)	GEP42.EXE GMEM40.EXE
PLCC	M4-MACH-PL44	4 gang sockets. 44-pin PLCC socket. Supports LATTICE iM4A3-32/32,iM4A5-32/32,iM4A3-64/32, iM4A5-64/32.(PLCC-44)	GMACH.EXE

PLCC	M4-MPU51-PL44	4 gang sockets. 44-pin PLCC socket. Supports MPU 8751/89C51 series.(PLCC-44)	GPGM51.EXE
PLCC	M4-MTV41X-PL44	4 gang sockets. 44-pin PLCC socket. Supports MYSON MTV416MV.(PLCC-44)	GMTV.EXE
PLCC	M4-MTVX12-PL44	4 gang sockets. 44-pin PLCC socket. Supports MYSON MTV212MV,MTV312MV,MTV412MV.(PLCC-44)	GMTV.EXE
PLCC	M4-PICS-PL44	4 gang sockets. 44-pin PLCC socket. Supports MICROCHIP PIC series.(PLCC-44)	GPIC1.EXE GPIC18.EXE GPIC2.EXE
PLCC	M4-SM59D03-PL44	4 gang sockets. 40-pin DIP socket. Supports SYNCMOS SM59D03G2C,SM59D03G2L.(PLCC-44)	GPGM51.EXE
PLCC	M6-FLASH-PL32	6 gang sockets. 32-pin PLCC socket. Supports E(E)PROM/FLASH/LPC/FWH PLCC32 package IC.(PLCC-32)	GMEM32.EXE

QFN(MLF/LGA)	M1-AT32UC3B-ML64	64-pin QFN(PITCH 0.5mm,9x9mm,Array:16 on 4 + 1) socket. Supports ATMEL AT32UC3B0128,AT32UC3B0256.(QFN-64)	XASIG.EXE
QFN(MLF/LGA)	M1-ATA661X-QN38	38-pin QFN(PITCH 0.5mm,7x5mm,Array:12 on 2,7 on 2 + 1) socket. Supports ATMEL ATA6617.(QFN-38)	XAVR.EXE
QFN(MLF/LGA)	M1-CC251X-ML36	36-pin QFN(PITCH 0.5mm,6x6mm,Array:9 on 4 + 1) socket. Supports TI CC2510F16RSP.(QFN-36)	XACC2430. EXE
QFN(MLF/LGA)	M1-CM512-QN28	28-pin QFN(PITCH 0.4mm,4x4mm,Array:7 on 4 + 1) socket. Supports NOVATEK CM512.(QFN-28)	X966X.EXE
QFN(MLF/LGA)	M1-CY8C20234-ML16	16-pin QFN(PITCH 0.5mm,3x3mm,Array:4 on 4) socket. Supports CYPRESS CY8C20234-12LKXI.(QFN-16)	XACY8C2X. EXE
QFN(MLF/LGA)	M1-CY8C20334-ML24	24-pin QFN(PITCH 0.5mm,4x4mm,Array:6 on 4) socket. Supports CYPRESS CY8C20334-12LFXI,CY8C21323-24LFXI.(QFN-24)	XACY8C2X. EXE
QFN(MLF/LGA)	M1-CY8C2XXXX-ML32B	32-pin QFN(PITCH 0.5mm,5x5mm,Array:8 on 4 + 1) socket. Supports CYPRESS CY8C20424-12LKXI,CY8C20434-12LKXI, CY8C21434-24LKXI.(QFN-32)	XACY8C2X. EXE
QFN(MLF/LGA)	M1-HCM508-ML40	40-pin QFN(PITCH 0.5mm,6x6mm,Array:10 on 4 + 1) socket. Supports HIMAX CM508.(QFN-40)	X966X.EXE

QFN(MLF/LGA)	M1-ISD2360-QN32	32-pin QFN(PITCH 0.5mm,5x5mm,Array:8 on 4 + 1) socket. Supports NUVOTON ISD2360.(QFN-32)	XASIG.EXE
QFN(MLF/LGA)	M1-NT50360-QN32	32-pin QFN(PITCH 0.4mm,4x4mm,Array:8 on 4 + 1) socket. Supports NOVATEK NT50360.(QFN-32)	X966X.EXE
QFN(MLF/LGA)	M1-OS81110-ML48	48-pin QFN(PITCH 0.5mm,7x7mm,Array:12 on 4 + 1) socket. Supports SMSC OS81110.(QFN-48)	XATMP.EXE
QFN(MLF/LGA)	M1-PICS-ML28A	28-pin QFN(PITCH 0.65mm,6x6mm,Array:7 on 4 + 1) socket. Supports MICROCHIP PIC series.(MLF/QFN-28)	XPIC2.EXE
QFN(MLF/LGA)	M1-SM3712-QN40	40-pin QFN(PITCH 0.4mm,5x5mm,Array:10 on 4 + 1) socket. Supports SILICON MOTION SM3712.(QFN-40)	XSM3712.EXE
QFN(MLF/LGA)	M1-UN-ML16	16-pin QFN(PITCH 0.5mm,3x3mm,Array:4 on 4) socket. Supports pin to pin.(MLF/QFN-16)	ALL100.EXE
QFN(MLF/LGA)	M1-UN-ML20	20-pin QFN(PITCH 0.5mm,4x4mm,Array:5 on 4 + 1) socket. Supports pin to pin.(MLF/QFN-20)	ALL100.EXE
QFN(MLF/LGA)	M1-UN-ML36	36-pin QFN(PITCH 0.5mm,6x6mm,Array:9 on 4 + 1) socket. Supports pin to pin.(MLF/QFN-36)	ALL100.EXE
QFN(MLF/LGA)	M1-UN-ML40	40-pin QFN(PITCH 0.5mm,6x6mm,Array:10 on 4 + 1) socket. Supports pin to pin.(MLF/QFN-40)	ALL100.EXE

QFN(MLF/LGA)	M1-UN-ML64	64-pin QFN(PITCH 0.5mm,9x9mm,Array:16 on 4 + 1) socket. Supports pin to pin.(MLF/QFN-64)	ALL100.EXE
QFN(MLF/LGA)	M1-UN-QN28	28-pin QFN(PITCH 0.5mm,5x5mm,Array:7 on 4 + 1) socket. Supports pin to pin.(MLF/QFN-28)	ALL100.EXE
QFN(MLF/LGA)	M1-XRP7724-QN44	44-pin QFN(PITCH 0.5mm,7x7mm,Array:11 on 4 + 1) socket. Supports EXAR XRP7724.(TQFN-44)	XACC2430. EXE
QFN(MLF/LGA)	M1-XRP77XX-QN40	40-pin QFN(PITCH 0.5mm,6x6mm,Array:10 on 4 + 1) socket. Supports EXAR XRP7704,XRP7708,XRP7714, XRP7740.(TQFN-40)	XACC2430. EXE
QFN(MLF/LGA)	M1-ZW4101-QN56	56-pin QFN(PITCH 0.5mm,8x8mm,Array:14 on 4 + 1) socket. Supports ZWAVE ZM4101.(QFN-56)	XASIG.EXE
QFN(MLF/LGA)	M4-AT89C5131-QN32	4 gang sockets. 32-pin QFN(PITCH 0.65mm,7x7mm,Array:8 on 4 + 1) socket. Supports ATMEL AT89C5130A,AT89C5131A.(MLF-32)	GC8051.EXE
QFN(MLF/LGA)	M4-AUO302-QN40	4 gang sockets. 40-pin QFN(PITCH 0.4mm,5x5mm,Array:10 on 4 + 1) socket. Supports RICHTEK AUO302.(QFN-40)	G966X.EXE

QFN(MLF/LGA)	M4-AVR-ML32C	<p>Gang MODULE.</p> <p>Need option TOP(TOP-AVR-ML28A / TOP-AVR-ML32A).</p> <p>M4-AVR-ML32C+option TOP(4 pcs).</p> <p>Supports ATMEL ATMEGA8,ATMEGA48,ATMEGA88, ATMEGA168,ATMEGA328.(MLF-28/32)</p>	GAVR.EXE
QFN(MLF/LGA)	M4-C8051F321-QN28	<p>4 gang sockets.</p> <p>28-pin QFN(PITCH 0.5mm,5x5mm,Array:7 on 4 + 1) socket.</p> <p>Supports SILICON LABS C8051F311/313/315/321/351/353/411/ 413.(QFN-28)</p>	GC8051.EXE
QFN(MLF/LGA)	M4-CM602-QN28	<p>4 gang sockets.</p> <p>28-pin QFN(PITCH 0.5mm,5x5mm,Array:7 on 4 + 1) socket.</p> <p>Supports RICHTEK,HIMAX CM602.(QFN-28)</p>	G966X.EXE
QFN(MLF/LGA)	M4-CS801-QN24	<p>4 gang sockets.</p> <p>24-pin QFN(PITCH 0.5mm,4x4mm,Array:6 on 4 + 1) socket.</p> <p>Supports GMT CS801.(QFN-24)</p>	G966X.EXE
QFN(MLF/LGA)	M4-EM250-QN48	<p>4 gang sockets.</p> <p>48-pin QFN(PITCH 0.5mm,7x7mm,Array:12 on 4 + 1) socket.</p> <p>Supports EMBER EM250.(QFN-48)</p>	GEMBER.EXE

QFN(MLF/LGA)	M4-EM260-QN40	4 gang sockets. 40-pin QFN(PITCH 0.5mm,6x6mm,Array:10 on 4 + 1) socket. Supports EMBER EM260.(QFN-40)	GEMBER.EXE
QFN(MLF/LGA)	M4-G1422-ML32	4 gang sockets. 32-pin QFN(PITCH 0.5mm,5x5mm,Array:8 on 4 + 1) socket. Supports AUO AUOG1422.(QFN-32)	GAUOX8.EXE
QFN(MLF/LGA)	M4-G1422-ML32A	4 gang sockets. 32-pin QFN(PITCH 0.5mm,5x5mm,Array:8 on 4 + 1) socket. Supports AUO AUOG1422.(QFN-32)	GAUOX8.EXE
QFN(MLF/LGA)	M4-GAUO303-QN40	4 gang sockets. 40-pin QFN(PITCH 0.4mm,5x5mm,Array:10 on 4 + 1) socket. Supports GMT AUO-P303.(QFN-40)	G966X.EXE
QFN(MLF/LGA)	M4-M430F1XX1-ML64	4 gang sockets. 64-pin QFN(PITCH 0.5mm,9x9mm,Array:16 on 4 + 1) socket. Supports TI MSP430F1481IRTD.(QFN-64)	GMSP.EXE
QFN(MLF/LGA)	M4-P51VP-QN52	4 gang sockets. 52-pin QFN(PITCH 0.5mm,8x8mm,Array:13 on 4 + 1) socket. Supports PAION P51VP704F.(QFN-52)	GC8051.EXE

QFN(MLF/LGA)	M4-SIM64368-QN16	4 gang sockets.	G6436A.EXE
		16-pin QFN(PITCH 0.65mm,4x4mm,Array:4 on 4 + 1) socket. Supports A-MEN SIM64368.(QFN-16)	
QFN(MLF/LGA)	M4-Z8FMC16100-ML32	4 gang sockets.	GPGMZ8.EXE
		32-pin QFN(PITCH 0.5mm,5x5mm,Array:8 on 4 + 1) socket. Supports ZILOG Z8FMC16100QKSG.(QFN-32)	
QFP	M1-56F8366-TQ144	144-pin QFP(PITCH 0.5mm,20x20mm) socket.	XA56FXX.EXE
		Supports FREESCALE,MOTOROLA MC56F8366.(LQFP-144)	
QFP	M1-64F2238-QF100	100-pin QFP(PITCH 0.5mm,14x14mm) socket.	XAHMPU.EXE
		Supports RENESAS HD64F2238BTE.(TQFP-100)	
QFP	M1-64F3687-QF64	64-pin QFP(PITCH 0.5mm,10x10mm) socket.	XAHMPU.EXE
		Supports RENESAS HD64F3687FP.(LQFP-64)	
QFP	M1-AVR-QF44	44-pin QFP(PITCH 0.8mm,10x10mm) socket.	XA56FXX.EXE
		Supports ATMEL ATMEGA16/L;	XA9500.EXE
		FREESCALE,MOTOROLA MC56F8025,MC9S08AW16/32/48/60CFGE;	XAMHCS.EXE
		LATTICE ispLSI2032E/V/VE,ispLSI2064V/VE;	XAPLSI.EXE
		XILINX XC2C32/64/A,XC9536/72/XL/XV.(QFP-44)	XAVR.EXE
			XXC2.EXE

QFP	M1-CS8963G-QF32	32-pin QFP(PITCH 0.8mm,7x7mm) socket. Supports MYSON CS8963G.(LQFP-32)	XASIG.EXE
QFP	M1-CS896XAG-LQ48	48-pin QFP(PITCH 0.5mm,7x7mm) socket. Supports MYSON CS8967AG,CD8968AG.(LQFP-48)	XASIG.EXE
QFP	M1-FLASH-PQ80	80-pin QFP(PITCH 0.8mm,14x20mm) socket. Supports AMD AM29BDD160D; SPANSION S29CD016G; STM M58BW016DB-T.(PQFP-80)	XA28F1.EXE XA28F2.EXE
QFP	M1-LFXP3-TQ144	144-pin QFP(PITCH 0.5mm,20x20mm) socket. Supports LATTICE LFXP3C,LFXP6C,LFXP3E,LFXP6E.(TQFP-144)	XLFXP.EXE
QFP	M1-M058SLAN-LQ48	48-pin QFP(PITCH 0.5mm,7x7mm) socket. Supports NUVOTON M058SLAN.(QFP-48)	XPGM52.EXE
QFP	M1-M058SSAN-LQ64	64-pin QFP(PITCH 0.4mm,7x7mm) socket. Supports NUVOTON M058SSAN.(QFP-64)	XPGM52.EXE
QFP	M1-M30624-QF100	100-pin QFP(PITCH 0.65mm,14x20mm) socket. Supports RENESAS M16C6XP.(QFP-100)	XAMPU2.EXE
QFP	M1-M38039-QF64	64-pin QFP(PITCH 0.8mm,14x14mm) socket. Supports RENESAS M38039FFFP.(QFP-64)	XAMPU2.EXE

QFP	M1-MACH231SP-TQ100	100-pin QFP(PITCH 0.5mm,14x14mm) socket. Supports LATTICE M4A5-128,M4A5-164.(TQFP-100)	XAMACH1.EXE
QFP	M1-MACH4000-TQ100	100-pin QFP(PITCH 0.5mm,14x14mm) socket. Supports LATTICE LC4064B/C/V/ZC,LC4128B/C/V/ZC,LC4256B/V. (TQFP-100)	XAMACH2.EXE
QFP	M1-MB90F347-LQ100	100-pin QFP(PITCH 0.5mm,14x14mm) socket. Supports FUJITSU MB90F347.(LQFP-100)	XAMPU3.EXE
QFP	M1-MB90F347-QF100	100-pin QFP(PITCH 0.65mm,14x20mm) socket. Supports FUJITSU MB90F947,MB90F347.(QFP-100)	XAMPU3.EXE
QFP	M1-MB90F543GS-QF100	100-pin QFP(PITCH 0.5mm,14x14mm) socket. Supports FUJITSU MB90F543GS.(QFP-100)	XAMPU3.EXE
QFP	M1-MC9S12C-QF48	48-pin QFP(PITCH 0.5mm,7x7mm) socket. Supports FREESCALE MC9S12C32/64/128.(QFP-48)	XAMHCS.EXE
QFP	M1-MC9S12NE-LQ112	112-pin QFP(PITCH 0.65mm,20x20mm) socket. Supports FREESCALE MC9S12NE64CPVE.(LQFP-112)	XAMHCS.EXE
QFP	M1-MC9S12NE-TQ80	80-pin QFP(PITCH 0.65mm,14x14mm) socket. Supports FREESCALE,MOTOROLA MC9S12NE64VTU.(LQFP-80)	XAMHCS.EXE

QFP	M1-MC9S12VR-LQ32	32-pin QFP(PITCH 0.8mm,7x7mm) socket. Supports FREESCALE MC9S12VR48F2CLC.(LQFP-32)	XAMHCS.EXE
QFP	M1-MC9S12XD-TQ144	144-pin QFP(PITCH 0.5mm,20x20mm) socket. Supports FREESCALE,MOTOROLA MC9S12XDT256CAG.(LQFP-144)	XAMHCS.EXE
QFP	M1-MC9S12XE-LQ144	144-pin QFP(PITCH 0.5mm,20x20mm) socket. Supports FREESCALE MC9S12XE series.(LQFP-144)	XAMHCS.EXE
QFP	M1-MC9S12XS-QF64	64-pin QFP(PITCH 0.5mm,10x10mm) socket. Supports FREESCALE,MOTOROLA MC9S12XS/XF series. (QFP-64)	XAMHCS.EXE
QFP	M1-NUC1X0RX-TQ64	64-pin QFP(PITCH 0.5mm,10x10mm) socket. Supports NUVOTON NUC100RXXXX series, NUC120RXXXX series.(LQFP-64)	XPGM52.EXE
QFP	M1-NUC-LQ48	48-pin QFP(PITCH 0.5mm,7x7mm) socket. Supports NUVOTON NUC102XXX series.(QFP-48)	XPGM52.EXE
QFP	M1-PIC18FK80-TQ64	64-pin QFP(PITCH 0.5mm,10x10mm) socket. Supports MICROCHIP PIC18F66K80.(TQFP-64)	XPIC18.EXE
QFP	M1-PIC18FKXX-TQ64	64-pin QFP(PITCH 0.5mm,10x10mm) socket. Supports MICROCHIP PIC18F65K90.(QFP-64)	XPIC18.EXE

QFP	M1-PIC24FJ-TQ80	80-pin QFP(PITCH 0.5mm,12x12mm) socket. Supports MICROCHIP PIC24FJ256GA108-I/PT, PIC24FJ128GA008-I/PT,dsPIC33FJ64MC508-I/PT.(TQFP-80)	XPIC24H.EXE
QFP	M1-PSD8XX-QF52	52-pin QFP(PITCH 0.65mm,10x10mm) socket. Supports STM PSD854F2V.(QFP-52)	XAPSD4.EXE
QFP	M1-ST72F561-QF32	32-pin QFP(PITCH 0.8mm,7x7mm) socket. Supports STM ST72F361Kx,ST72F561Kx.(QFP-32)	XAST72.EXE
QFP	M1-STM32F0XXK-QF32	32-pin QFP(PITCH 0.8mm,7x7mm) socket. Supports STM STM32F0xxK series.(LQFP-32)	XASTM32.EXE
QFP	M1-STM32F10XC-QF48V2	48-pin QFP(PITCH 0.5mm,7x7mm) socket. Supports STM STM32F101Cx,STM32F102Cx,STM32F103Cx, STM32F373CCTx.(LQFP-48)	XASTM32.EXE
QFP	M1-STM8L-LQ64	64-pin QFP(PITCH 0.5mm,10x10mm) socket. Supports STM STM8L152R8T.(LQFP-64)	XASTM8.EXE
QFP	M1-TMP86P820U-QF64	64-pin QFP(PITCH 0.5mm,10x10mm) socket. Supports TOSHIBA TMP86P820U,TMP86PM29AU.(QFP-64)	XATMP.EXE
QFP	M1-TMP86PM29-TQ64V2	64-pin QFP(PITCH 0.5mm,10x10mm) socket. Supports TOSHIBA TMP86PM29BUG.(LQFP-64)	XATMP.EXE

QFP	M1-TMP87PM29UG-LQ64	64-pin QFP(PITCH 0.5mm,10x10mm) socket. Supports TOSHIBA TMP87PM29UG.(QFP-64)	XATMP.EXE
QFP	M1-UN-LQ48	48-pin QFP(PITCH 0.5mm,7x7mm) socket. Supports pin to pin.(QFP-48)	ALL100.EXE
QFP	M1-UN-LQ64	64-pin QFP(PITCH 0.4mm,7x7mm) socket. Supports pin to pin.(QFP-64)	ALL100.EXE
QFP	M1-UN-QF32	32-pin QFP(PITCH 0.8mm,7x7mm) socket. Supports pin to pin.(QFP-32)	ALL100.EXE
QFP	M1-UN-QF44	44-pin QFP(PITCH 0.8mm,10x10mm) socket. Supports pin to pin.(QFP-44)	ALL100.EXE
QFP	M1-UN-QF64	64-pin QFP(PITCH 0.8mm,14x14mm) socket. Supports pin to pin.(QFP-64)	ALL100.EXE
QFP	M1-UN-TQ48	48-pin QFP(PITCH 0.5mm,7x7mm) socket. Supports pin to pin.(QFP-48)	ALL100.EXE
QFP	M1-UN-TQ64	64-pin QFP(PITCH 0.5mm,10x10mm) socket. Supports pin to pin.(QFP-64)	ALL100.EXE
QFP	M1-UPD78F9177-QF44	44-pin QFP(PITCH 0.8mm,10x10mm) socket. Supports NEC UPD78F9177GB.(QFP-44)	XAUPD78X. EXE

QFP	M1-UPD79F0096GB-QF52	52-pin QFP(PITCH 0.65mm,10x10mm) socket. Supports NEC UPD79F0096GB.(LQFP-52)	XAUPD78X. EXE
QFP	M1-UPD79F0145GA-QF48	48-pin QFP(PITCH 0.5mm,7x7mm) socket. Supports NEC UPD79F0145GA.(LQFP-48)	XAUPD78X. EXE
QFP	M1-XC73108-Q160	160-pin QFP(PITCH 0.65mm,28x28mm) socket. Supports XILINX XC95144.(QFP-160)	XA9500.EXE
QFP	M1-XC95108-QF100	100-pin QFP(PITCH 0.5mm,14x14mm) socket. Supports XILINX XC95108,XC95144,XC95144XL.(QFP-100)	XA9500.EXE
QFP	M1-XC9572-QF100	100-pin QFP(PITCH 0.5mm,14x14mm) socket. Supports XILINX XC9572,XC9572XL.(QFP-100)	XA9500.EXE
QFP	M1-XC9572-QF100A	100-pin QFP(PITCH 0.5mm,14x14mm) socket. Supports XILINX XC9572,XC9572XL,XC9572XV.(QFP-100)	XA9500.EXE
QFP	M1-XPLA3-VQ100	100-pin QFP(PITCH 0.5mm,14x14mm) socket. Supports XILINX XCR3064XL,XCR3128XL.(VQFP-100)	XAXPLA3.EXE
QFP	M4-56F8013-QF32	4 gang sockets. 32-pin QFP(PITCH 0.8mm,7x7mm) socket. Supports MOTOROLA MC56F8013.(LQFP-32)	G56FXX.EXE

QFP	M4-AVR-QF32	4 gang sockets. 32-pin QFP(PITCH 0.8mm,7x7mm) socket. Supports ATMEL ATMEGA8.(QFP-32)	GAVR.EXE
QFP	M4-AVR-QF44	4 gang sockets. 44-pin QFP(PITCH 0.8mm,10x10mm) socket. Supports ATMEL ATMEGA32.(QFP-44)	GAVR.EXE
QFP	M4-C164CI-QF80	4 gang sockets. 80-pin QFP(PITCH 0.65mm,14x14mm) socket. Supports INFINEON SAK-C164CI-8EM.(QFP-80)	GMPU.EXE
QFP	M4-C505CA-QF44	4 gang sockets. 44-pin QFP(PITCH 0.8mm,10x10mm) socket. Supports INFINEON SAB-C505CA-4E.(QFP-44)	GMPU.EXE
QFP	M4-C515C-QF80	4 gang sockets. 80-pin QFP(PITCH 0.65mm,14x14mm) socket. Supports INFINEON SAF-C515C-8EM.(QFP-80)	GMPU.EXE
QFP	M4-C8051F320-QF32	4 gang sockets. 32-pin QFP(PITCH 0.8mm,7x7mm) socket. Supports SILICON LABS C8051F310,C8051F320.(QFP-32)	GC8051.EXE

QFP	M4-CE55X-QF80	4 gang sockets. 80-pin QFP(PITCH 0.8mm,14x20mm) socket. Supports PHILIPS P87C557E8.(QFP-80)	GMPU.EXE
QFP	M4-HCS08GB-TQ64	4 gang sockets. 64-pin QFP(PITCH 0.5mm,10x10mm) socket. Supports MOTOROLA MC9S08GB32,MC9S08GB60.(LQFP-64)	GMHCS.EXE
QFP	M4-HCS08GT-QF44	4 gang sockets. 44-pin QFP(PITCH 0.8mm,10x10mm) socket. Supports MOTOROLA MC9S08GT32,MC9S08GT60.(QFP-44)	GMHCS.EXE
QFP	M4-HCS08-TQ32	4 gang sockets. 32-pin QFP(PITCH 0.8mm,7x7mm) socket. Supports MOTOROLA MC9S08RC/RD/RE/RGXXX.(LQFP-32)	GMHCS.EXE
QFP	M4-HCS08-TQ44	4 gang sockets. 44-pin QFP(PITCH 0.8mm,10x10mm) socket. Supports MOTOROLA MC9S08RC/RD/RE/RGXXX.(LQFP-44)	GMHCS.EXE
QFP	M4-HCS12-QF80	4 gang sockets. 80-pin QFP(PITCH 0.65mm,14x14mm) socket. Supports MOTOROLA MC9S12E128,MC9S12DJ256.(QFP-80)	GMHCS.EXE

QFP	M4-HCS12-TQ112	4 gang sockets. 112-pin QFP(PITCH 0.65mm,20x20mm) socket. Supports MOTOROLA MC9S12E128,MC9S12DP256B.(LQFP-112)	GMHCS.EXE
QFP	M4-HCS12-TQ52	4 gang sockets. 52-pin QFP(PITCH 0.65mm,10x10mm) socket. Supports MOTOROLA MC9S12C32MPB.(LQFP-52)	GMHCS.EXE
QFP	M4-HCS12UF-TQ100	4 gang sockets. 100-pin QFP(PITCH 0.5mm,14x14mm) socket. Supports MOTOROLA MC9S12UF32PU.(LQFP-100)	GMHCS.EXE
QFP	M4-HCS12UF-TQ64	4 gang sockets. 64-pin QFP(PITCH 0.5mm,10x10mm) socket. Supports MOTOROLA MC9S12UF32PB.(LQFP-64)	GMHCS.EXE
QFP	M4-HD6473726-QF80	4 gang sockets. 80-pin QFP(PITCH 0.65mm,14x14mm) socket. Supports RENESAS HD6473726H.(QFP-80)	GHDMPU.EXE
QFP	M4-HD6473827-QF80	4 gang sockets. 80-pin QFP(PITCH 0.65mm,14x14mm) socket. Supports RENESAS HD6473827RH.(QFP-80)	GHDMPU.EXE

QFP	M4-HD6473837-QF100	4 gang sockets. 100-pin QFP(PITCH 0.65mm,14x20mm) socket. Supports RENESAS HD6473837F.(QFP-100)	GHDMPU.EXE
QFP	M4-HD64F214X-TQ100	4 gang sockets. 100-pin QFP(PITCH 0.5mm,14x14mm) socket. Supports HITACHI,RENESAS HD64F2144,HD64F2148.(TQFP-100)	GHDMPU.EXE
QFP	M4-HD64F216X-TQ144	4 gang sockets. 144-pin QFP(PITCH 0.4mm,16x16mm) socket. Supports HITACHI,RENESAS HD64F2161,HD64F2169.(TQFP-144)	GHDMPU.EXE
QFP	M4-HD64F3064-TQ100	4 gang sockets. 100-pin QFP(PITCH 0.5mm,14x14mm) socket. Supports RENESAS HD64F3064BF,HD64F3062BF,HD64F3024F. (QFP-100)	GHDMPU.EXE
QFP	M4-HD64F38024-QF80	4 gang sockets. 80-pin QFP(PITCH 0.65mm,14x14mm) socket. Supports RENESAS HD64F38024H,HD64738024H.(QFP-80)	GHDMPU.EXE
QFP	M4-HD64F38327-QF80	4 gang sockets. 80-pin QFP(PITCH 0.65mm,14x14mm) socket. Supports RENESAS HD64F38327H.(QFP-80)	GHDMPU.EXE

QFP	M4-HT8A-QF64	4 gang sockets. 64-pin QFP(PITCH 1.0mm,14x20mm) socket. Supports HOLTEK HT48R70A-1,HT48E70,HT48RU80. (QFP-64)	GHT48R.EXE
QFP	M4-ISD15000-QF48	4 gang sockets. 48-pin QFP(PITCH 0.5mm,7x7mm) socket. Supports WINBOND ISD15002,ISD15004,ISD15008,ISD15016.(QFP-48)	GMPU.EXE
QFP	M4-M16C-QF100	4 gang sockets. 100-pin QFP(PITCH 0.65mm,14x20mm) socket. Supports RENESAS M3030SFDPGP.(QFP-100)	GAMPU2.EXE
QFP	M4-M3823X-QF80	4 gang sockets. 80-pin QFP(PITCH 0.5mm,12x12mm) socket. Supports RENESAS M3823xGxHP.(QFP-80)	GAMPU2.EXE
QFP	M4-M430F1XX-QF64	4 gang sockets. 64-pin QFP(PITCH 0.5mm,10x10mm) socket. Supports TI MSP430P325IPM.(QFP-64)	GMSP.EXE
QFP	M4-MEC5004-QF128	4 gang sockets. 128-pin QFP(PITCH 0.4mm,14x14mm) socket. Supports SMSC MEC5004,MEC5004L.(QFP-128)	GTMP.EXE

QFP	M4-MN101CF91D-TQ48	4 gang sockets.	GMN101.EXE
		48-pin QFP(PITCH 0.5mm,7x7mm) socket.	
		Supports PANASONIC MN101CF91D.(TQFP-48)	
QFP	M4-MN101EF31G-TQ80	4 gang sockets.	GMN101.EXE
		80-pin QFP(PITCH 0.65mm,14x14mm) socket.	
		Supports PANASONIC MN101EF31GWX.(LQFP-80)	
QFP	M4-MN103SFE4K-LQ80	4 gang sockets.	GMN101.EXE
		80-pin QFP(PITCH 0.65mm,14x14mm) socket.	
		Supports PANASONIC MN103SFE4K.(LQFP-80)	
QFP	M4-MN103SFK1K-TQ80	4 gang sockets.	GMN101.EXE
		80-pin QFP(PITCH 0.5mm,12x12mm) socket.	
		Supports PANASONIC MN103SFK1K.(TQFP-80)	
QFP	M4-MPU51-QF44	4 gang sockets.	GPGM51.EXE
		44-pin QFP(PITCH 0.8mm,10x10mm) socket.	
		Supports MPU 8751/89C51 series.(TQFP/QFP-44)	
QFP	M4-MPU51-TQ48	4 gang sockets.	GPGM51.EXE
		48-pin QFP(PITCH 0.5mm,7x7mm) socket.	
		Supports WINBOND W78LE516.(LQFP-48)	

QFP	M4-MTV41X-QF44	4 gang sockets.	GMTV.EXE
		44-pin QFP(PITCH 0.8mm,10x10mm) socket.	
		Supports MYSON MTV416GMF.(QFP-44)	
QFP	M4-NT68664MFG-QF128	4 gang sockets.	GAMPU2.EXE
		128-pin QFP(PITCH 0.5mm,14x20mm) socket.	
		Supports NOVATEK NT68664MFG.(QFP-128)	
QFP	M4-NT68665MFG-QF128	4 gang sockets.	GAMPU2.EXE
		128-pin QFP(PITCH 0.5mm,14x20mm) socket.	
		Supports NOVATEK NT68665MFG.(QFP-128)	
QFP	M4-NT68665-QF128	4 gang sockets.	GAMPU2.EXE
		128-pin QFP(PITCH 0.5mm,14x20mm) socket.	
		Supports NOVATEK NT68665.(QFP-128)	
QFP	M4-PICS-TQ44	4 gang sockets.	GPIC1.EXE
		44-pin QFP(PITCH 0.8mm,10x10mm) socket.	GPIC18.EXE
		Supports MICROCHIP PIC series.(TQFP-44)	GPIC2.EXE
QFP	M4-PICS-TQ64	4 gang sockets.	GPIC1.EXE
		64-pin QFP(PITCH 0.5mm,10x10mm) socket.	GPIC18.EXE
		Supports MICROCHIP PIC series.(TQFP-64)	GPIC2.EXE

QFP	M4-R5F61725-TQ100	4 gang sockets. 100-pin QFP(PITCH 0.5mm,14x14mm) socket. Supports RENESAS R5F61725FPV.(TQFP-100)	GHDMPU.EXE
QFP	M4-R8C1013-QF32	4 gang sockets. 32-pin QFP(PITCH 0.8mm,7x7mm) socket. Supports RENESAS R5F21114DFP.(QFP-32)	GAMPU2.EXE
QFP	M4-ST72F324-QF32	4 gang sockets. 32-pin QFP(PITCH 0.8mm,7x7mm) socket. Supports STM ST72F324K2,ST72F324K4,ST72F324K6.(QFP-32)	GST72.EXE
QFP	M4-ST72F324-QF44	4 gang sockets. 44-pin QFP(PITCH 0.8mm,10x10mm) socket. Supports STM ST72F321J7,ST72F324J4.(QFP-44)	GST72.EXE
QFP	M4-ST72F521R-QF64	4 gang sockets. 64-pin QFP(PITCH 0.8mm,12x12mm) socket. Supports STM ST72F521R9Tx.(QFP-64)	GST72.EXE
QFP	M4-STM8-QF32	4 gang sockets. 32-pin QFP(PITCH 0.8mm,7x7mm) socket. Supports STM STM8S105K6T,STM8S105K4T.(QFP-32)	GSTM8.EXE

QFP	M4-STM8-QF80	4 gang sockets. 80-pin QFP(PITCH 0.65mm,14x14mm) socket. Supports STM STM8AH61AATA.(QFP-80)	GSTM8.EXE
QFP	M4-STR91X-QF128	4 gang sockets. 128-pin QFP(PITCH 0.4mm,14x14mm) socket. Supports STM STR912FAW44X6.(QFP-128)	GMPU.EXE
QFP	M4-TMP88FW45-QF80	4 gang sockets. 80-pin QFP(PITCH 0.8mm,14x20mm) socket. Supports TOSHIBA TMP88FW45FG.(QFP-80)	GTMP.EXE
QFP	M4-TMP89FH42U-QF44	4 gang sockets. 44-pin QFP(PITCH 0.8mm,10x10mm) socket. Supports TOSHIBA TMP89FH42UG,TMP89FM42UG, TMP89FH42LUG.(QFP-44)	GTMP.EXE
QFP	M4-TMP89FS60FG-QF64	4 gang sockets. 64-pin QFP(PITCH 0.8mm,14x14mm) socket. Supports TOSHIBA TMP89FS60FG.(QFP-64)	GTMP.EXE
QFP	M4-TMP91FU62DF-QF80	4 gang sockets. 80-pin QFP(PITCH 0.8mm,14x20mm) socket. Supports TOSHIBA TMP91FU62DFG.(QFP-80)	GTMP.EXE

QFP	M4-TMP91FW60DFG-QF100	4 gang sockets. 100-pin QFP(PITCH 0.65mm,14x20mm) socket. Supports TOSHIBA TMP91FW60DFG.(QFP-100)	GTMP.EXE
QFP	M4-TMP92FD23AF-QF100	4 gang sockets. 100-pin QFP(PITCH 0.5mm,14x14mm) socket. Supports TOSHIBA TMP92FD23AFG,T5CE6.(QFP-100)	GTMP.EXE
QFP	M4-TMP92FD54AIF-QF100	4 gang sockets. 100-pin QFP(PITCH 0.5mm,14x14mm) socket. Supports TOSHIBA TMP92FD54AIF.(QFP-100)	GTMP.EXE
QFP	M4-TMPM330FDFG-QF100	4 gang sockets. 100-pin QFP(PITCH 0.5mm,14x14mm) socket. Supports TOSHIBA TMPM330FDWFG,TMPM330FYWFG. (QFP-100)	GTMP.EXE
QFP	M4-TMPM370FYFG-QF100	4 gang sockets. 100-pin QFP(PITCH 0.5mm,14x14mm) socket. Supports TOSHIBA TMPM370FYFG.(QFP-100)	GTMP.EXE
QFP	M4-TMPM374FWUG-LQ44	4 gang sockets. 44-pin QFP(PITCH 0.8mm,10x10mm) socket. Supports TOSHIBA TMPM374FWUG.(LQFP-44)	GTMP.EXE

QFP	M4-UPD78F0034-TQ64	4 gang sockets. 64-pin QFP(PITCH 0.65mm,12x12mm) socket. Supports NEC UPD78F0034AYGK.(TQFP-64)	GUPD78X.EXE
QFP	M4-UPD78F0354-TQ100	4 gang sockets. 100-pin QFP(PITCH 0.5mm,14x14mm) socket. Supports NEC UPD78F0354GC.(TQFP-100)	GUPD78X.EXE
QFP	M4-UPD78F0703-QF80	4 gang sockets. 80-pin QFP(PITCH 0.65mm,14x14mm) socket. Supports NEC UPD78F0703YGC(A).(QFP-80)	GUPD78X.EXE
QFP	M4-UPD78P0308-QF100	4 gang sockets. 100-pin QFP(PITCH 0.5mm,14x14mm) socket. Supports NEC UPD78P0308GC,UPD78P064GC.(QFP-100)	GUPD78X.EXE
QFP	M4-Z8FMC16100-QF32	4 gang sockets. 32-pin QFP(PITCH 0.8mm,7x7mm) socket. Supports ZILOG Z8FMC16100AKSG.(QFP-32)	GPGMZ8.EXE
QFP	M8-AUO11303K1-QF64	8 gang sockets. 64-pin QFP(PITCH 0.4mm,7x7mm) socket. Supports AUO AUO11303K1.(QFP-64)	GAUOX8.EXE

QFP	M8-AUO11303-QF64	8 gang sockets. 64-pin QFP(PITCH 0.4mm,7x7mm) socket. Supports AUO AUO11303V1.(QFP-64)	GAUOX8.EXE
QFP	M8-AUO12301-QF64V2	8 gang sockets. 64-pin QFP(PITCH 0.4mm,7x7mm) socket. Supports AUO AUO12301K2,AUO12301V1.(QFP-64)	GAUOX8.EXE
SDIP	M1-UN-SD42	42-pin SDIP(PITCH 1.778mm,600mil) socket. Supports pin to pin.(SDIP-42)	ALL100.EXE
SDIP	M4-HCS08GT-SD42	4 gang sockets. 42-pin SDIP(PITCH 1.778mm,600mil) socket. Supports MOTOROLA MC9S08GT32,MC9S08GT60.(SDIP-42)	GMHCS.EXE
SDIP	M4-TMP86FX09N-SD32	4 gang sockets. 32-pin SDIP(PITCH 1.78mm,400mil) socket. Supports TOSHIBA TMP86FH09NG,TMP86F809NG,TMP86F409NG, TMP86FH09ANG,TMP86FH93NG.(SDIP-32)	GTMP.EXE
SOJ	M4-EP32M-SJ42	4 gang sockets. 42-pin SOJ(PITCH 1.27mm,10.16mm,Dead Bug) socket. Supports word wide EPROM from 8M to 32M; OKI MR27V402F.(SOJ-42)	GEP42.EXE

SON(DFN)	M1-MC9S08PA-DN8	8-pin SON(PITCH 0.65mm,3x3mm,Array:4 on 2 + 1) socket. Supports FREESCALE MC9S08PA4.(DFN-8)	XAMHCS.EXE
SON(DFN)	M4-PICS-DN8	4 gang sockets. 8-pin SON(PITCH 0.65mm,3x3mm,Array:4 on 2 + 1) socket. Supports MICROCHIP PIC12F615.(DFN-8)	GPIC2.EXE
SON(DFN)	M4-SEEP-SN8A3	4 gang sockets. 8-pin SON(PITCH 0.5mm,2x3mm,Array:4 on 2 + 1) socket. Supports SERIAL PROM.(SON/DFN-8).	GSEEP.EXE
SON(DFN)	M4-SEEP-SN8D	4 gang sockets. 8-pin SON(PITCH 0.5mm,1.97x2.23mm,Array:4 on 2) socket. Supports SERIAL EEPROM.(SNT-8)	GSEEP.EXE
SON(DFN)	M6-SEEP-SN8	6 gang sockets. 8-pin SON(PITCH 1.27mm,5x6mm,Array:4 on 2 + 1) socket. Supports SERIAL EEPROM.(SON-8)	GSEEPX6.EXE
SON(DFN)	M6-SEEP-SN8A	6 gang sockets. 8-pin SON(PITCH 1.3mm,6x8mm,Array:4 on 2) socket. Supports SSERIAL EEPROM.(SON-8)	GSEEPX6.EXE
SOP	M1-18F25J10-SS28	28-pin SOP(PITCH 0.65mm,5.3mm) socket. Supports MICROCHIP PIC18F25JXX.(SSOP-28)	XPIC18.EXE

SOP	M1-ISD2130-SO14	14-pin SOP(PITCH 1.27mm,3.9mm) socket. Supports NUVOTON ISD2130.(SOP-14)	XASIG.EXE
SOP	M1-ISD2360-SO16	16-pin SOP(PITCH 1.27mm,7.5mm) socket. Supports NUVOTON ISD2360.(SOP-16)	XASIG.EXE
SOP	M1-ST7FLITEXX-SO16	16-pin SOP(PITCH 1.27mm,3.9mm) socket. Supports STM ST7FOXA0M6,ST7FLITEU09M6,ST7FLITEUS2M6, ST7FLITES2Y0M6,ST7FLITE05Y0M6,ST7FLITE09Y0M6.(SOP-8/16)	XAST72.EXE
SOP	M1-UN-PS44	44-pin SOP(PITCH 1.27mm,13.6mm) socket. Supports pin to pin.(PSOP-44)	XA28F1.EXE XA28F2.EXE
SOP	M1-UN-QS28	28-pin SOP(PITCH 0.635mm,3.94mm) socket. Supports pin to pin.(QSOP-28)	ALL100.EXE
SOP	M1-UN-SO16	16-pin SOP(PITCH 1.27mm,3.9mm) socket. Supports pin to pin.(SOP-16)	ALL100.EXE
SOP	M1-UN-SO28	28-pin SOP(PITCH 1.27mm,7.5mm) socket. Supports pin to pin.(SOP-28)	ALL100.EXE
SOP	M1-UN-SS34	34-pin SOP(PITCH 0.65mm,5.3mm) socket. Supports pin to pin.(SSOP-34)	ALL100.EXE

SOP	M1-UN-SS48	48-pin SOP(PITCH 0.635mm,7.5mm) socket. Supports pin to pin.(SSOP-48)	ALL100.EXE
-----	------------	--	------------

SOP	M1-UN-TS48	48-pin SOP(PITCH 0.5mm,18.4mm) socket.	XA28F1.EXE
		Supports pin to pin.(TSOP-48)	XA28F2.EXE
			XAEP42.EXE

SOP	M1-UN-TS48A	48-pin SOP(PITCH 0.5mm,18.4mm) socket.	XA28F1.EXE
		Supports pin to pin.(TSOP-48)	XA28F2.EXE
			XAEP42.EXE

SOP	M1-UN-TS56	56-pin SOP(PITCH 0.5mm,18.4mm) socket.	XA28F1.EXE
		Supports pin to pin.(TSOP-56)	XA28F2.EXE

SOP	M1-UPD78F0103-SS30	30-pin SOP(PITCH 0.65mm,6.1mm) socket. Supports NEC UPD78F0103M5MC.(SSOP-30)	XAUPD78X. EXE
-----	--------------------	---	------------------

SOP	M4-FLASH-PS44	4 gang sockets.	GMEMW48.
		44-pin SOP(PITCH 1.27mm,13.6mm) socket.	EXE
		Supports pin to pin.(PSOP-44)	

SOP	M4-FLASH-PS44B	4 gang sockets.	GMEMW48.
		44-pin SOP(PITCH 1.27mm,13.6mm) socket.	EXE
		Supports INTEL TB28F008SA.(PSOP-44)	

SOP	M4-FLASH-TS40	4 gang sockets. 40-pin SOP(PITCH 0.5mm,18.4mm) socket. Supports FLASH MEMORY 40-pin IC (WORD-WIDE).(TSOP-40)	GMEM40.EXE
SOP	M4-HCS08-SO28	4 gang sockets. 28-pin SOP(PITCH 1.27mm,7.5mm) socket. Supports MOTOROLA MC9S08RC/RD/RE/RGXXX.(SOP-28)	GMHCS.EXE
SOP	M4-HT8A-SO28	4 gang sockets. 28-pin SOP(PITCH 1.27mm,7.5mm) socket. Supports HOLTEK HT46R22,HT46R23,HT46R24,HT48R12(24), HT48R10A,HT48R30A,HT48R31(28),HT48R50A,HT48RA3, HT48RA5,HT48RB8,82K68E(28).(SOP-18/20/24/28)	GHT48R.EXE
SOP	M4-HT8A-SS56	4 gang sockets. 56-pin SOP(PITCH 0.635mm,7.8mm) socket. Supports HOLTEK HT46R24,HT48R50A,HT48R70A. (SSOP-48/56)	GHT48R.EXE
SOP	M4-HT8B-SO28	4 gang sockets. 28-pin SOP(PITCH 1.27mm,7.5mm) socket. Supports HOLTEK HT48R05,HT48R06,HT48R12(18/20), HT48R31(18/20),HT48RA0,HT48RA0A,82K68E(20). (SOP-18/20/24/28)	GHT48R.EXE

SOP	M4-M3428X-SS20	4 gang sockets.	GAMPU2.EXE
		20-pin SOP(PITCH 0.65mm,4.4mm) socket.	
		Supports RENESAS M34283G2GP.(SSOP-20)	

SOP	M4-PIC18FJXX-SS28	4 gang sockets.	GPIC18.EXE
		28-pin SOP(PITCH 0.65mm,5.3mm) socket.	
		Supports MICROCHIP PIC18F24J10.(SSOP-28)	

SOP	M4-PICS-SO20	4 gang sockets.	GPIC1.EXE
		20-pin SOP(PITCH 1.27mm,7.5mm) socket.	GPIC18.EXE
		Supports MICROCHIP PIC series.(SOP-18/20)	GPIC2.EXE

SOP	M4-PICS-SO28	4 gang sockets.	GPIC1.EXE
		28-pin SOP(PITCH 1.27mm,7.5mm) socket.	GPIC18.EXE
		Supports MICROCHIP PIC series.(SOP-28)	GPIC2.EXE

SOP	M4-PICS-SS20	4 gang sockets.	GPIC1.EXE
		20-pin SOP(PITCH 0.65mm,5.3mm) socket.	GPIC18.EXE
		Supports MICROCHIP PIC series.(SSOP-18/20)	GPIC2.EXE

SOP	M4-PICS-SS28	4 gang sockets.	GPIC1.EXE
		28-pin SOP(PITCH 0.65mm,5.3mm) socket.	GPIC18.EXE
		Supports MICROCHIP PIC series.(SSOP-28)	GPIC2.EXE

SOP	M4-PICS-TSS14	4 gang sockets.	GPIC1.EXE
		14-pin SOP(PITCH 0.65mm,4.4mm) socket.	GPIC18.EXE
		Supports MICROCHIP PIC16F616.(SSOP-14)	GPIC2.EXE
SOP	M4-SEEP-SO16		GAVR2.EXE
		4 gang sockets.	GEPCS.EXE
		16-pin SOP(PITCH 1.27mm,3.9mm) socket.	GPIC1.EXE
		Supports SERIAL EEPROM.(SOP-16)	GPIC2.EXE
			GSEEP.EXE
SOP	M4-SEEP-SO8A		GAVR2.EXE
		4 gang sockets.	GEPCS.EXE
		8-pin SOP(PITCH 1.27mm,5.4mm) socket.	GPIC1.EXE
		Supports SERIAL EEPROM;	GPIC2.EXE
		MICROCHIP PIC12C509A.(SOP-8)	GSEEP.EXE
SOP	M4-SEEP-SO8B		GAVR2.EXE
		4 gang sockets.	GEPCS.EXE
		8-pin SOP(PITCH 1.27mm,4.4mm) socket.	GPIC1.EXE
		Supports SERIAL EEPROM.(SOP-8,173mil)	GPIC2.EXE
			GSEEP.EXE

SOP	M4-SEEP-SS8	4 gang sockets.	GAVR2.EXE
		8-pin SOP(PITCH 0.65mm,4.4mm) socket.	GEPCS.EXE
		Supports SERIAL EEPROM.(SSOP-8)	GPIC1.EXE
			GPIC2.EXE
			GSEEP.EXE
SOP	M4-ST72F621-SO34	4 gang sockets.	GST72.EXE
		34-pin SOP(PITCH 1.02mm,7.5mm) socket.	
		Supports STM ST72F621L4M1.(SOP-34)	
SOP	M4-TMP86FH09AMG-SO32	4 gang sockets.	GTMP.EXE
		32-pin SOP(PITCH 1.27mm,7.5mm) socket.	
		Supports TOSHIBA TMP86FH09BMG.(SOP-32)	
SOP	M4-XCFXXS-SS20	4 gang sockets.	GSEEP.EXE
		8-pin SOP(PITCH 0.65mm,4.4mm) socket.	
		Supports XILINX XCF01S,XCF02S,XCF04S.(SSOP-20)	
SOP	M4-Z8F042A-SO8	4 gang sockets.	GPGMZ8.EXE
		8-pin SOP(PITCH 1.27mm,3.9mm) socket.	
		Supports ZILOG Z8F042ASB.(SOP-8)	

SOP	M4-Z8F0XXX-SO28	4 gang sockets. 28-pin SOP(PITCH 1.27mm,7.5mm) socket. Supports ZILOG Z8F042ASH(SOP-20),Z8F042ASJ(SOP-28).	GPGMZ8.EXE
SOP	M4-Z8F0XXX-SS28	4 gang sockets. 28-pin SOP(PITCH 0.65mm,5.3mm) socket. Supports ZILOG Z8F042AHH(SSOP-20),Z8F042AHJ(SSOP-28).	GPGMZ8.EXE
SOP	M6-AT45XX-SO28	6 gang sockets. 28-pin SOP(PITCH 1.27mm,8.7mm) socket. Supports ATMEL AT45XX series.(SOP-28)	GSEEPX6.EXE
SOP	M6-AT45XX-TS28	6 gang sockets. 28-pin SOP(PITCH 0.55mm,11.8mm) socket. Supports ATMEL AT45XX series.(TSOP-28,8x13.4mm)	GSEEPX6.EXE
SOP	M6-EP512-TS20	6 gang sockets. 20-pin SOP(PITCH 0.65mm,4.4mm) socket. Supports EPROM from 27C64 to 27C512.(TSOP-20)	GMEM32.EXE
SOP	M6-EP512-TS28N	6 gang sockets. 28-pin SOP(PITCH 0.55mm,11.8mm) socket. Supports EPROM from 27C64 to 27C512,FLASH 28F512, FLASH 29F512.(TSOP-28,8x13.4mm)	GMEM32.EXE

SOP	M6-FLASH-TS32N	6 gang sockets. 32-pin SOP(PITCH 0.5mm,12.4mm) socket. Supports FLASH/LPC/FWH TSOP32 package IC.(TSOP-32,8x14mm)	GMEM32.EXE
SOP	M6-FLASH-TS32W	6 gang sockets. 32-pin SOP(PITCH 0.5mm,18.4mm) socket. Supports FLASH/LPC/FWH TSOP32 package IC.(TSOP-32,8x20mm)	GMEM32.EXE
SOP	M6-M25PXX-SO16	6 gang sockets. 16-pin SOP(PITCH 1.27mm,7.5mm) socket. Supports STM M25P16,M25P32,M25P64.(SOP-16)	GSEEPX6.EXE
SOP	M8-28F256P-TS56V2	8 gang sockets. 56-pin SOP(PITCH 0.5mm,18.4mm) socket. Supports NUMONYX JS28FxxxP30/P33 series.(TSOP-56)	GMEMW56. EXE
SOP	M8-AM29LV256-TS56	8 gang sockets. 56-pin SOP(PITCH 0.5mm,18.4mm) socket. Supports AMD AM29LV128ML/MH,AM29LV256ML/MH.(TSOP-56)	GMEMW56. EXE
SOP	M8-AM29LV256-TS56A	8 gang sockets. 56-pin SOP(PITCH 0.5mm,18.4mm) socket. Supports AMD AM29LV128ML/MH,AM29LV256ML/MH.(TSOP-56)	GMEMW56. EXE

SOP	M8-BUF08821-TS20	8 gang sockets. 20-pin SOP(PITCH 0.65mm,4.4mm) socket. Supports TI BUF08821.(TSSOP-20)	GBUFX8.EXE
SOP	M8-BUF16821-TS28	8 gang sockets. 28-pin SOP(PITCH 0.65mm,4.4mm) socket. Supports TI BUF16821.(TSSOP-28)	GBUFX8.EXE
SOP	M8-FLASH-TS48	8 gang sockets. 48-pin SOP(PITCH 0.5mm,18.4mm) socket. Supports FLASH MEMORY 48-pin IC (WORD-WIDE).(TSOP-48)	GMEMW48. EXE
SOP	M8-FLASH-TS48B	8 gang sockets. 48-pin SOP(PITCH 0.5mm,18.4mm) socket. Supports FLASH MEMORY 48-pin IC (WORD-WIDE).(TSOP-48)	GEP42.EXE GMEMW48. EXE
SOP	M8-FLASH-TS56	8 gang sockets. 56-pin SOP(PITCH 0.5mm,18.4mm) socket. Supports INTEL 28F128J3A/J3C/J5,28F320J3A/J3C/J5, 28F640J3A/J3C/J5,28F016SA/SV,28F032SA.(TSOP-56)	GMEMW56. EXE

SOP	M8-FLASH-TS56A	8 gang sockets.	
		56-pin SOP(PITCH 0.5mm,18.4mm) socket.	GMEMW56.
		Supports INTEL 28F128J3A/J3C/J5,28F320J3A/J3C/J5, 28F640J3A/J3C/J5,28F016SA/SV,28F032SA.(TSOP-56)	EXE
SOP	M8-S29PLXXX-TS56	8 gang sockets.	
		56-pin SOP(PITCH 0.5mm,18.4mm) socket.	GMEMW56.
		Supports SPANSION S29PL127J-TF-13.(TSOP-56)	EXE