


1. Connect ALL-200/G to PC or laptop by USB cable (you can refer to user's manual for connecting method).

1) Windows 7

Click Start button and then click Control Panel.

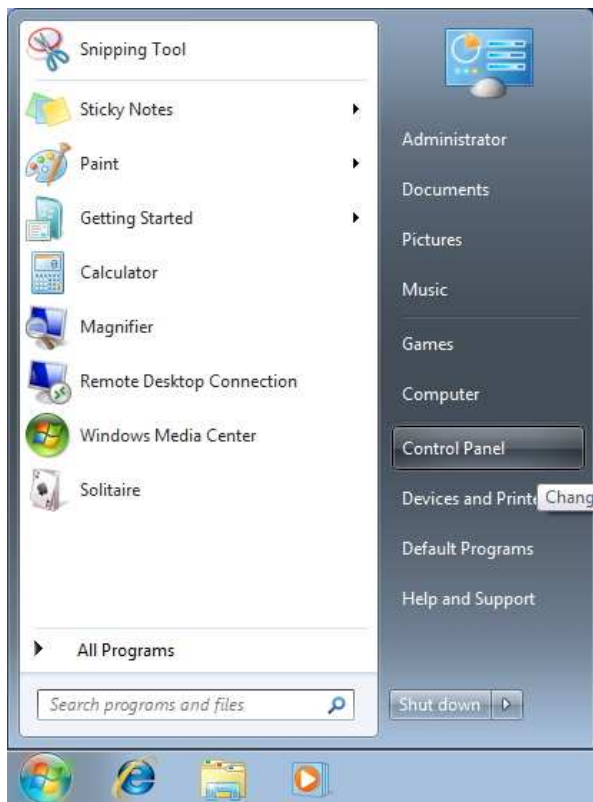


2) Windows 8

Right click mouse at blank place of the screen, and then you will see a task bar at the bottom, click "All apps" to enter application screen.




In apps, find "Control Panel" and then click to execute it.

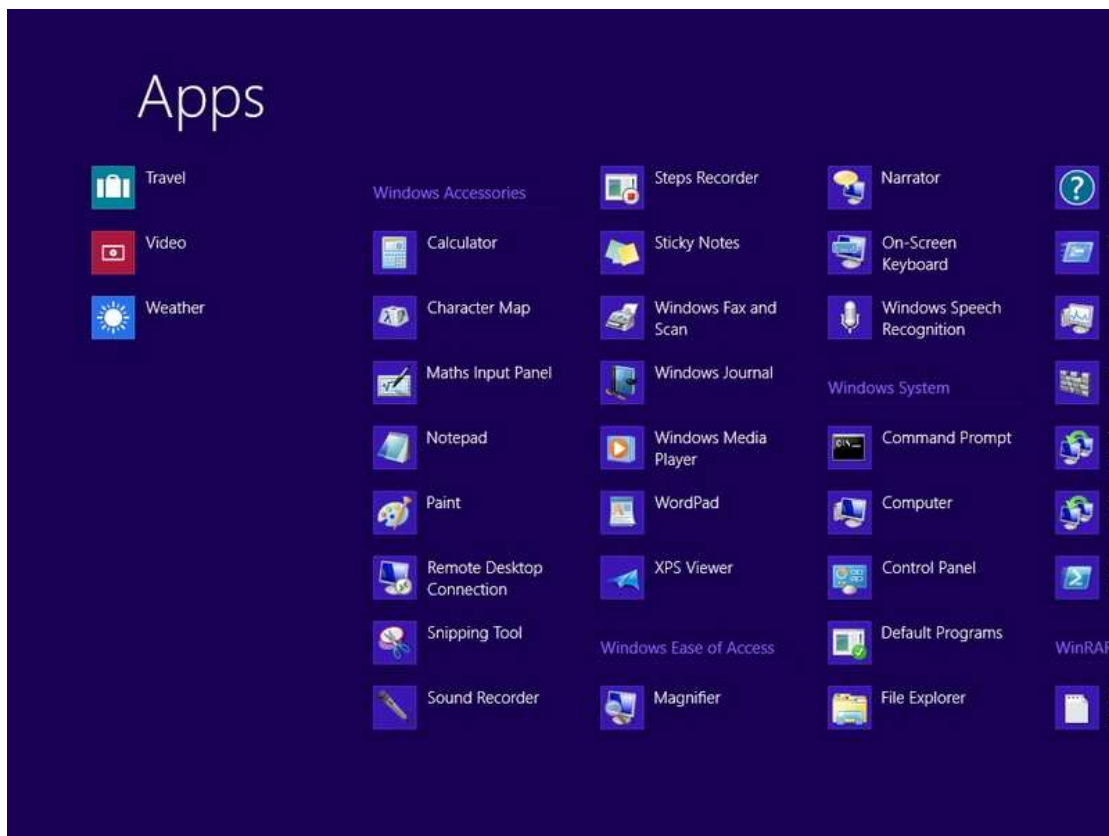


2. Click System and Security in Control Panel.




3. Click Device Manager at the next menu.

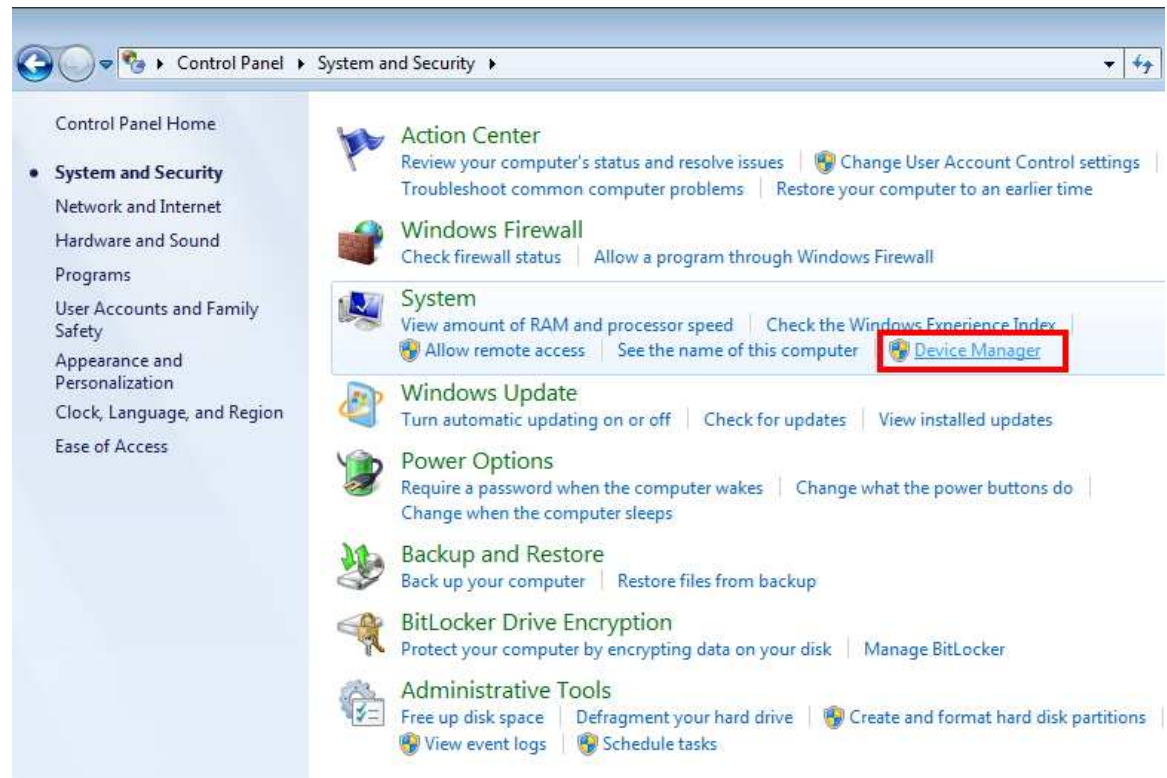

4. Under Other Devices, it will display a yellow ALL-200 device warning.

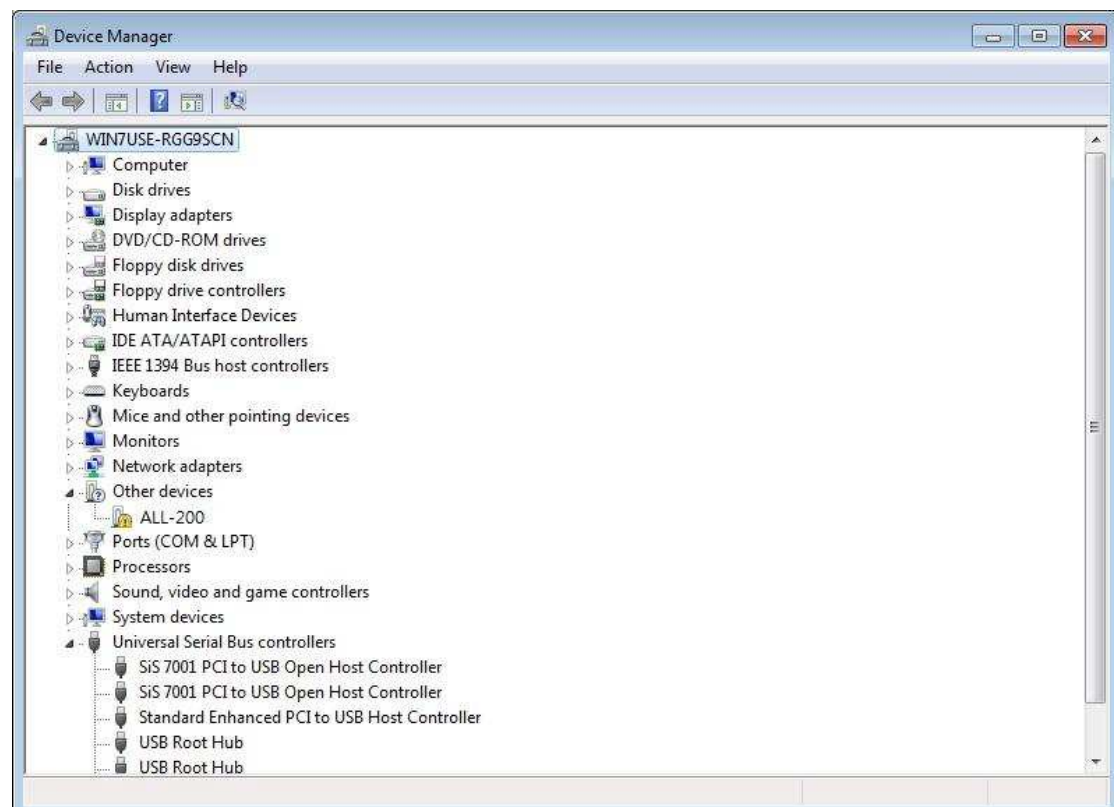

5. Right click this ALL-200 device warning and then select “Update Driver Software...”

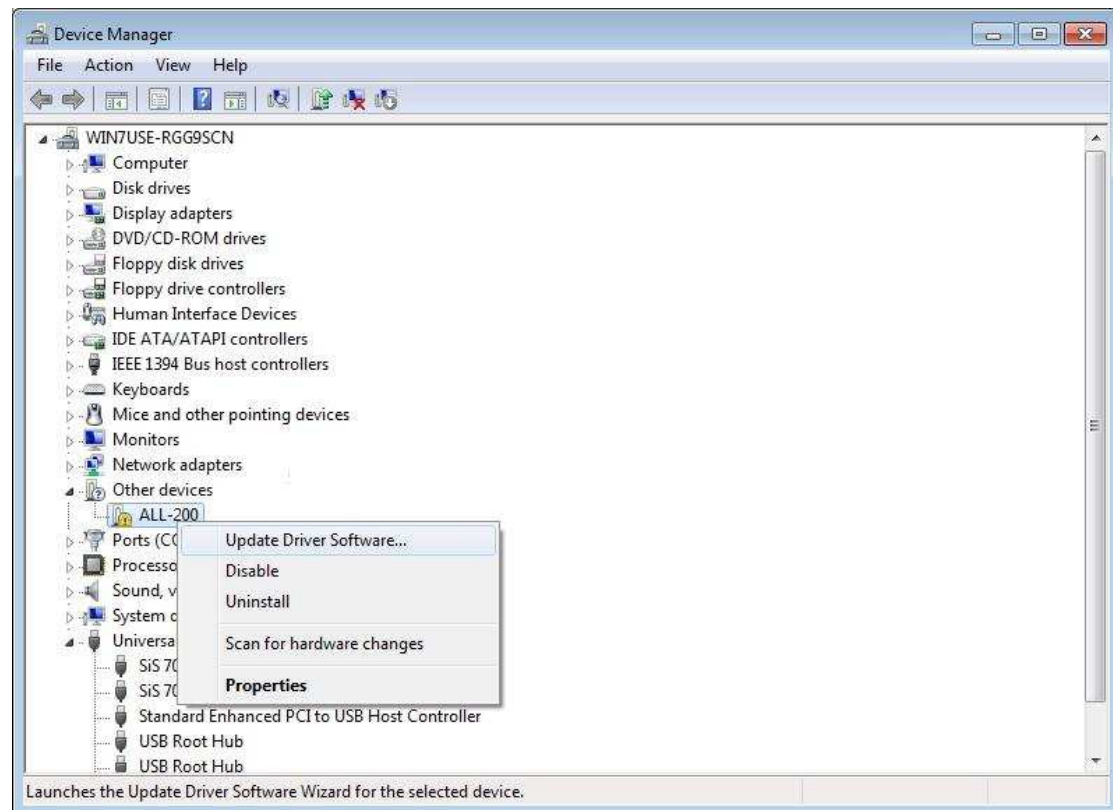


6. And then select “Browse my computer for driver software” at the next window.




7. You will need to allocate a location to install USB driver, and please click Browse to select it on a CD or in a folder on the PC (below picture takes installing 64 bit USB driver an example). And then click next to start installation.




8. At your first time installing the driver, it will display a Security warning, and please select “Always trust software from HI-LO SYSTEM RESEARCH CO.,LTD.”, and then click Install to continue.

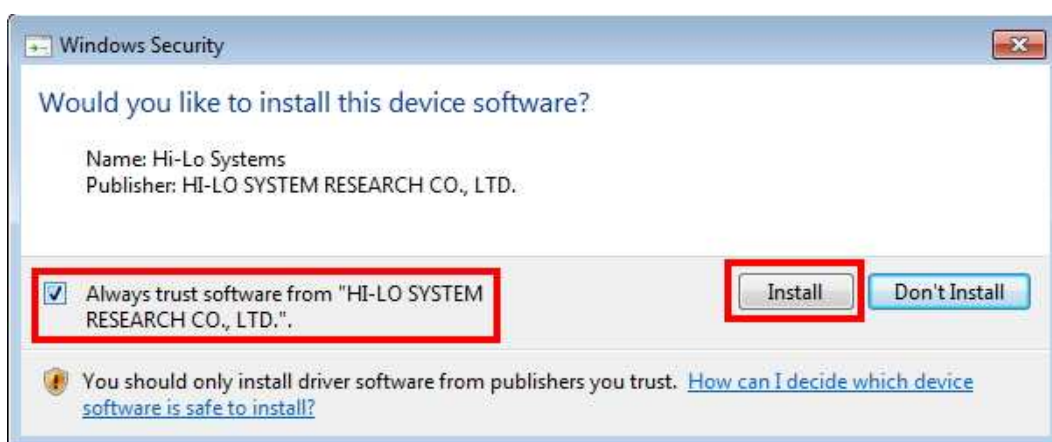

9. You will see the driver is under installing as below:

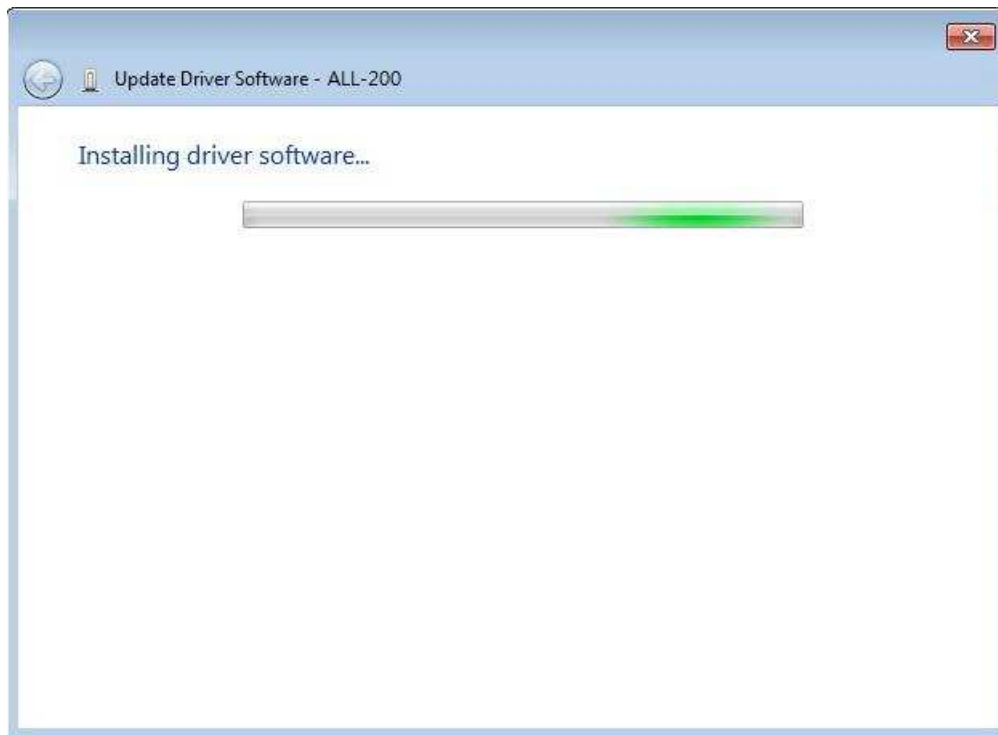

10. When the installation is finished, you will see below screen, and then click Close.

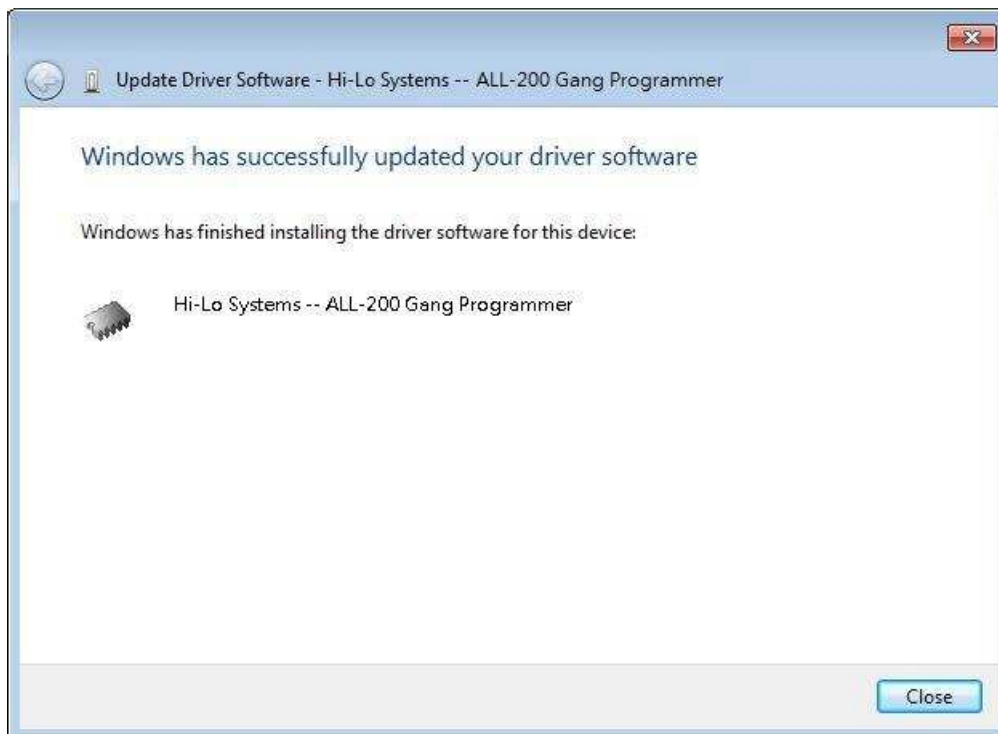

11. Return to the Device Manager you will see “HiLo USB Programmer” → “Hi-Lo Systems -- ALL-200 Gang Programmer”, that means you already installed ALL-200/G USB driver successfully. Then you can install ALL-200/G programming software to start programming.

